

USER GUIDE

FREEDOM SPRINT BLUETOOTH HEADPHONES (JF4)



BEFORE WE GET STARTED

REMEMBER THESE 4 THINGS...

01 INSTALL EAR CUSHIONS

 


Three sizes of patented secure fit ear cushions are included. The correct size for your ear will be the ones which fit snugly into the bowl of your ear and lock into the top as shown. Further guidance on the next 3 pages.


LEFT (L) AND RIGHT (R) MARK ON TOP SIDE



CUT AWAY FOR POSITIONING GUIDANCE

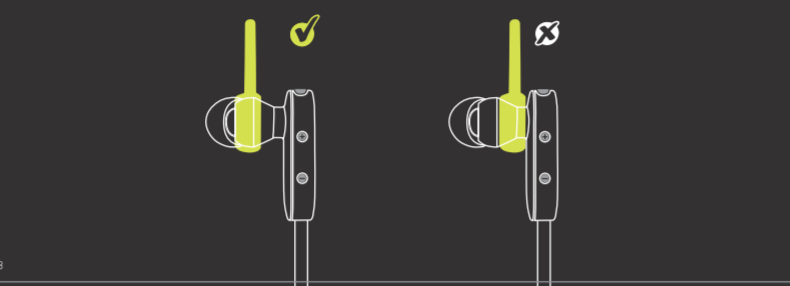

03

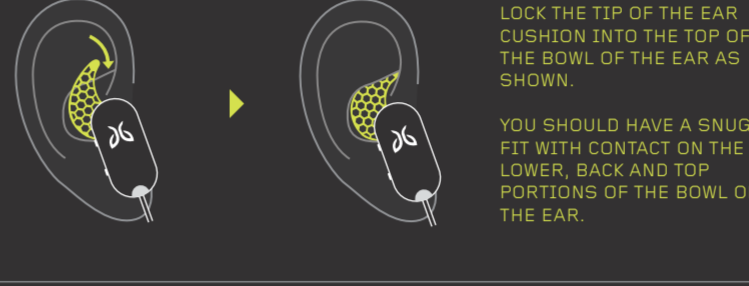 

LOCK THE TIP OF THE EAR CUSHION INTO THE TOP OF THE BOWL OF THE EAR AS SHOWN.

YOU SHOULD HAVE A SNUG FIT WITH CONTACT ON THE LOWER, BACK AND TOP PORTIONS OF THE BOWL OF THE EAR.

02 GREAT SOUND PERFORMANCE IS IN SELECTING THE RIGHT SIZE EARTIP



WE LOVE GREAT SOUND. MAKE SURE YOU HEAR IT.

Because everyone's ears are different, make sure to try out all sizes of eartips. Only with the perfect size eartips will you enjoy snug fit & optimum sound quality.



03 OUTDOORS / GYMS

KEEP THE MUSIC DEVICE AT OR ABOVE WAIST LEVEL ON YOUR RIGHT SIDE THE SAME SIDE AS THE HEADPHONE ANTENNA.

Your body is 80% water. Water blocks low power radio signal like Bluetooth. In the absence of nearby ceilings for signal bounce, your body can block the signal between the music device and the headphones. When outdoors or in gyms the use of armbands or wrist-worn music players are recommended. Having your music player in your pants pocket below waist level may produce varied results as your body can get between the music device & headphones.

WHEN OUTDOORS WEAR YOUR MUSIC DEVICE IN THIS ZONE TO AVOID SIGNAL BLOCKAGE FROM YOUR BODY.



HAVING THE DEVICE IN A POCKET ON YOUR LEG MAY PRODUCE VARIED RESULTS AS YOUR UPPER BODY CAN GET BETWEEN THE DEVICES.

04 LET US TAKE CARE OF YOU

TAKE A MOMENT TO REGISTER YOUR LIFETIME WARRANTY AGAINST SWEAT

jaybirdgear.com/intheclubnow

No login or account setup required.



TAKE CARE OF YOURSELF AS WELL & LISTEN RESPONSIBLY

Avoid excessive volume levels and prolonged periods of listening. Do not use around road traffic.

IN THE BOX

- JF4 Freedom Sprint Bluetooth Headphones
- Magnet Sealed JayBird Carry Case
- 3 pairs regular eartips (S,M,L)
- 3 pairs secure fitting ear-cushions (S,M,L)
- 1 pair of optional ear-hooks
- USB Cable
- User Manual

CHARGING

Charging the battery before use is recommended but not required. The headphones ship pre-charged however initial charge will vary.

Low battery is indicated by the status indicator blinking red with an audible tone every 20 seconds. Connect micro USB charging cable with the charging port of headphones under the USB cover on the right earpiece. Connect cable to the USB slot of any PC or Mac. The status indicator will be red while charging and will turn off when fully charged. JayBird also offers an AC power adapter (sold separately).

 
11

PAIR MODE

Begin with headphones powered off. Push and hold top button for 8 seconds until status light alternates red and blue. You are now in pair mode. See your phone/music device manual for pair instructions. Pass code is 0000.

POWER ON/OFF

Power on: Push & hold top button for 6 seconds. Power off: Push & hold top button for 3 seconds.

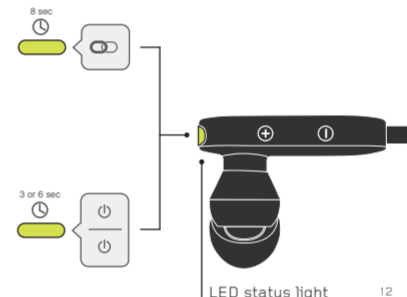

LED status light

PAIR MODE (detailed step by step instructions)

- Place headphones and mobile phone within 1 meter of each other.
- Put headphones into pair mode by pushing top button for 8 seconds. (LED will flash red & blue).
- On your music device, turn Bluetooth on and search for Bluetooth devices. Select "Freedom 4" in the Bluetooth device list.
- Enter password or PIN No. "0000" on your mobile phone if prompted.
- If required, after pairing, select "Freedom 4" in the Bluetooth device list and press "connect".
- After successful connecting, the blue light blinks twice every 4 seconds.

Note: If the pairing is not successful, switch off headphones by pushing the top button for 3 seconds, and then re-pair according to the steps outlined above. After pairing is successful, paired devices will remember each other. Unless pairing information is deleted, there is no need to pair again. The headphones will connect with the latest paired device. If you want to pair with other Bluetooth devices, switch off the Bluetooth function of the current Bluetooth device, and then pair and connect it with the new Bluetooth device according to steps outlined above.

13

PAIRING WITH A BLUETOOTH ADAPTER

- Place headphones and mobile phone within 1 meter of each other.
- Put the headphones into pair mode as outlined on prior page.
- If using BAU Universal Bluetooth Adapter put adapter into pair mode also (see BAU manual).
- Plug the Bluetooth adapter into the music device and play a song.
- The headphones and adapter will pair automatically (pass code of adapter must be 0000)
- After successful pairing and connecting, the LED status indicator on the headphones will blink twice every 4 seconds.

Note: Freedom Sprint does not support apt-X CD quality audio even though it's offered on JayBird Bluetooth adapters.

PAIRING WITH SEVERAL BLUETOOTH DEVICES

 
The headphones can connect with two devices at most. A mobile phone with HFP profile; and a device with A2DP profiles. If you want to pair two Bluetooth devices, please refer to the following steps.

- Firstly, pair the headphones with the Bluetooth adapter
- Disconnect the Bluetooth adapter from the iPhone or iPod
- Pair and connect the headphones with the mobile phone
- Reconnect the Bluetooth adapter, will connect with headphones automatically.

Note: Mobile phones that support HSP and A2DP profiles simultaneously may block the Bluetooth adapter from reconnecting to the headphones.

15

COMMANDS

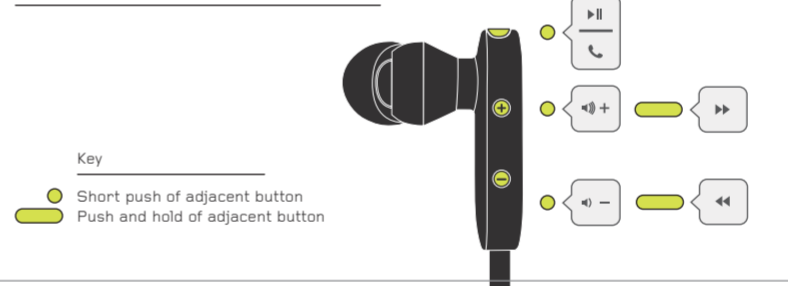

Key: Short push of adjacent button, Push and hold of adjacent button

MAKING A CALL

Function	Status	Indication	Operation
Voice dial	Standby mode	Short tone	Press & hold top button for 2 seconds
Ridial	Standby mode	Short tone	Double click top button
Volume Up	Music/Call mode	NA	Short presses of top button
Volume Down	Music/Call mode	NA	Short presses of Vol - button
Answer Call	Incoming Call	Short tone	Press top button
Reject Call	Incoming Call	Short tone	Press & hold top button for 2 seconds
End Call	During Call	Short tone	Press top button
Switch to the phone	During Call	Short tone	Press & hold top button for 2 seconds
Mute	During Call	Short tone	Press & hold top button for 2 seconds
Unmute	During Call	Short tone	Press & hold top button for 2 seconds

Note: Not all the mobile phones support all the functions listed. Please refer to the instruction of your mobile phone. When the volume is adjusted to max or min, you will hear a indication sound. For some mobile phones, when you accept a call on the phone, the call will be sent to the mobile phone. You can switch the call to headphones by using top button on headphones or through phone. Please refer to the instruction of your mobile phone for further information.

17

PLAYING MUSIC

Function	Status	Indication	Operation
Volume up	Music/Call mode	NA	Short presses of Vol+ button
Volume Down	Music/Call mode	NA	Short presses of Vol - button
Play/Pause	Music Mode	Short tone	Press top button
Next track	Music Mode	Short tone	Long press of Vol + button
Back track	Music Mode	Short tone	Long press of Vol - button

For some of mobile phones, when they are playing music, the music will transmit to the speaker of mobile phone. If this happens, select "transmit the sound through Bluetooth" in the "setting" of music play interface, and then choose "Freedom 4" in the device list. Please refer to the instruction of your mobile phone for further information. When the volume of headphones is adjusted to max or min you will hear a tone. Remote control the function such as next track, previous track, etc require your mobile phone to support AVRCP. Please refer to your mobile phone user manual or Bluetooth transmitter for further info.

18

STATUS LIGHT

Charging LED Indicator	Status of headphones	Tone Indicator	Status of headphones
Red light is on	Charging	Two tones every 5 sec	Conversation mode and mic mute
Red light is off	Finished charging	Tone every 30 seconds	Low battery

PAIRING LED INDICATOR

Pairing LED Indicator	Status of headphones
Red and blue alternating	Pair-Mode
Blue double blink every 2 sec	Standby mode
Blue periodic blinking	Connected to device
Red double blinking over 30 sec	Low battery

18

SPECIFICATIONS & CARE

JF4 Specifications	Care and maintenance
Bluetooth Version: V2.1 + EDR (newer versions offer no benefits for headphones)	Keep dry and do not store in a damp place. Do not put the product in direct sunlight for extended periods of time or in hot areas.
Profile: HSP, HFP, A2DP, AVRCP	High temperature will shorten the life of the electronic device, destroy the battery, and distort certain plastics.
Effective Range: 10 meters (30 feet)	Do not expose the product to extreme cold.
Working time: Music & calls up to 4.5 hours	Do not disassemble the product.
Standby time: Up to 150 hours	Do not drop the headphones.
Input voltage: DC 5A 100mA	Do not use chemicals or detergent to clean the product.
Charging time: Approximately 2 hours	If the product fails to work contact JayBird support at jaybirdgear.com
Dimensions: 16 x 35 x 8 mm	
Weight: Approx 16 g	

20

WARRANTY

Full warranty details at jaybirdgear.com/warranty +1.866.244.3399

WARNING: Due to the listening characteristics of these headphones do not use while driving, riding a bike or where vehicular traffic is present, or in any other activity where failure to hear surrounding sounds could be dangerous. Use of these headphones at excessive volumes may cause permanent hearing damage. Always turn the volume down before use. Take caution in regards to inserting objects into ear canal, use at own risk.

Copyright 2011 JayBird Gear LLC. All rights reserved. JayBird, and the JayBird logo are trademarks of JayBird Gear LLC. Bluetooth is a trademark owned by Bluetooth SIG, Inc. USA, and licensed to JayBird Gear LLC. iPhone is a trademark of Apple, Inc., registered in the U.S. and other countries. Manufacturer order European patent no EP141060791 & corresponding foreign patents. Assembled in China.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to device will void the user's authority to operate the device. The battery is recycled. Do not dispose of the battery in fire, as it may cause explosion.

21

TO COVER ALL FITTING PREFERENCES, EARHOOKS ARE INCLUDED AS AN ALTERNATIVE SECURE FIT OPTION.

